USING COLORADO VALLEY COMMUNICATIONS VOICEMAIL

Access Your Voicemail

From your phone number:

- 1. Dial *14.
- 2. If prompted, enter your password and then #. (The default password is 0000)

From a different phone number:

- 1. Dial 247-2000 locally or 979-247-2000 if out of the area.
- 2. Enter your 10-digit mailbox number. (Area Code & Telephone Number).
- 3. Enter your password and then #.

Record Your Greeting

- 1. Access your voice mailbox.
- 2. Press 9 for the mailbox setup menu.
- 3. Press 1 for greeting options.
- 4. Press 2 to record your greeting.
- Record your greeting and then press #. (Greeting will be saved on 0)

Change Your Password

- 1. Access your voice mailbox.
- 2. Press 9 for the mailbox setup menu.
- 3. Press 2 to change your password.
- 4. Enter your new password and then press #.
- 5. When prompted to verify the password, enter it again and then press #.

Retrieve Messages

- 1. Access your voice mailbox.
- 2. Your first new message may play immediately. If not, press 1 to listen to your messages. You will hear the announcement "You have X new messages and X saved messages."
- 3. Press 1 to listen to new messages.
- 4. Press 2 to listen to saved messages.

When Retrieving Messages, You Can:

- **Press 1** Play the message again.
- Press 2 Save the message and play the next message.
- Press 3 Delete the message and play the next message.
- **Press 4** Save the message as new.
- **Press 6** Forward the message to another mailbox.
- **Press 7** Skip backward in the message.
- Press 8 Pause the message.
- **Press 9** Skip forward in the message.

IT'S YOUR CALL...
TAKE IT OR LEAVE IT
TO VOICEMAIL.

Record Multiple Greetings

- 1. Access your voice mailbox.
- 2. Press 9 for the mailbox setup menu.
- 3. Press 1 for greeting options.
- 4. Press 5 to choose a new greeting.
- 5. Enter the greeting number 1-9. (Your main greeting is saved on 0)
- 6. Record your greeting, press #.

Check Active Greeting

- 1. Access your voice mailbox.
- 2. Press 9 for the mailbox setup menu.
- 3. Press 1 for greeting options.
- 4. Press 5 for multiple greeting options.
- 5. Press * to check active greeting.



- Recordings will be saved on the selected number as soon as the # key is pressed.
- Keep in mind that your initial greeting is saved on 0. You can go back to using it by selecting 0 as your greeting number.